

Datasheet: JackRapid[™] Termination Tool

Datasheet: JackRapid[™] Termination Tool

Introducing the new JackRapid, jack termination tool – the industry's most innovative and time-saving termination tool. This patented tool seats and terminates all wires simultaneously, with one squeeze of the ergonomic handle. Get accurate terminations and clean, consistent cuts every time.



Reduces installation time

- Easy-to-use tool seats and cuts all wires at once
- Increases productivity install jacks 8 times faster

Accurate, clean and consistent cuts and terminations

- · Consistent terminations every time no more wasted jacks
- Built-in bed helps hold jack in place

Eliminates user fatigue

- Ergonomic handle
- Convenient, built-in stripper

Future proof

• Replaceable blade heads for use with multiple vendor jack types

Wall-friendly

• Unique design easily accommodates close-to-wall installations




| Item | Model Name | Description |
|---------|----------------|--|
| 3093687 | JR-LEV-1 | JackRapid Termination Tool (for Leviton 41106, 41108, 5G108) |
| 3093756 | JR-LEV-1-H | JackRapid replacement blade head (for Leviton 41106, 41108, 5G108) |
| 3093808 | JR-SYS-UNI-1 | JackRapid Termination Tool (for Systimax MPS100E, C5, M1BH and Uniprise UNJ600/500/300) |
| 3093813 | JR-SYS-UNI-1-H | JackRapid replacement blade head (for Systimax MPS100E, C5, M1BH and Uniprise UNJ600/500/300) |
| 3093693 | JR-LEV-2 | JackRapid Termination Tool (for Leviton 61110, 5G110, 6110G) |
| 3093763 | JR-LEV-2-H | JackRapid replacement blade head (for Leviton 61110, 5G110, 6110G) |
| 3093700 | JR-SYS-2 | JackRapid Termination Tool (for Systimax MGS400, MGS600, MFP420, MFP520) |
| 3093824 | JR-SYS-2-H | JackRapid replacement blade head (for Systimax MGS400, MGS600, MFP420, MFP520) |
| 3093721 | JR-ORT-2 | JackRapid Termination Tool (for Ortronics TJ5E00, TJ600, TJ610) |
| 3093774 | JR-ORT-2-H | JackRapid replacement blade head (for Ortronics TJ5E00, TJ600, TJ610) |
| 2525461 | JR-ADC-2 | JackRapid Termination Tool (for ADC KM8, Copper Ten®) |
| 3338024 | JR-ADC-2-H | JackRapid replacement blade head (for ADC KM8, Copper Ten®) |
| 3093742 | JR-PAN-2 | JackRapid Termination Tool (for Panduit NK688M, NKP5E88M) |
| 3093795 | JR-PAN-2-H | JackRapid replacement blade head (for Panduit NK6X88M, NK688M, NKP5E88M) |
| 3057463 | JR-ERGOHANDLE | JackRapid Ergonomic Handle |

Get accurate terminations and clean, consistent cuts every time with the JackRapid Termination Tool.



Step 1

Strip cable jacket with a standard cable stripper or the built-in cable stripper.

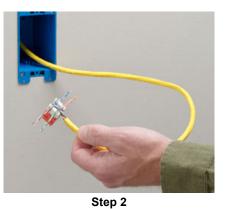

Determine wiring scheme. Dress all 4 pairs (8 wires).



Step 3

Insert jack in JackRapid front first with IDC slots facing blades of JackRapid.





Step 4

Ensure jack is completely and securely inserted in jack holder bed with IDC slots facing the blades.



Step 5 Pull trigger completely and remove excess wire prior to releasing trigger.



Step 6 Wires will be seated and cut for a solid termination.



Step 7

Release handle and remove jack from JackRapid tool. Visually verify proper termination.



Fluke Networks operates in more than 50 countries worldwide. To find your local office contact details, go to www.flukenetworks.com/contact.