


EZ-SnapJack™

Compatible with industry
standard wall plates.

Meets/ Exceeds
TIA/EIA-568-B.2-1

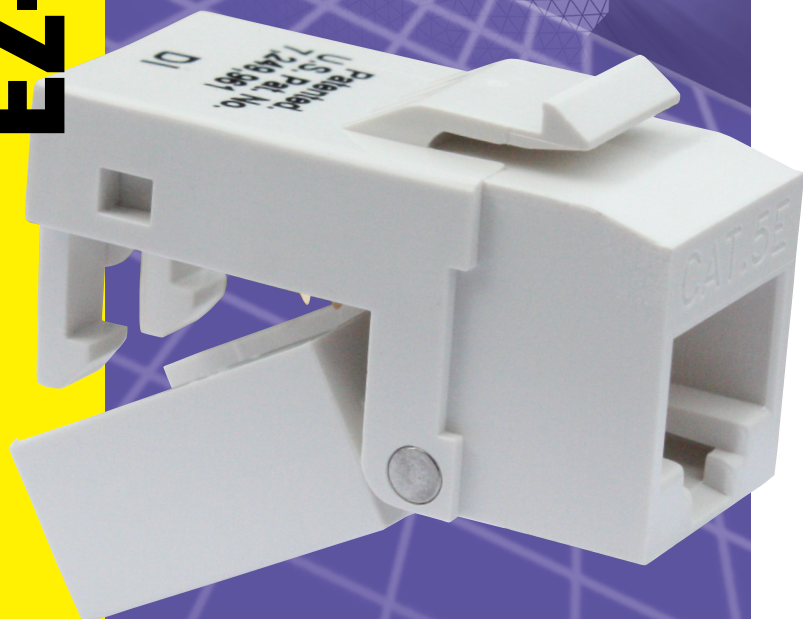


Prep cable

Insert wire guide

Snap together



PLATINUM TOOLS®

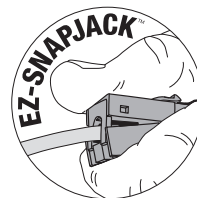

EZ-SnapJack™

First the EZ-RJ45®,
now the EZ-SnapJack! You may
never again need a punchdown
tool. At least for your wall jacks!
The patented EZ-SnapJack is self-
terminating and quickly installs
for professional results in a snap.

- Save time – No need for eight punch downs
- Repair damaged jacks on the spot
- EZ-SnapJacks are re-useable
- Wire guide ensures pairs stay in proper order for fast, easy termination
- Reduced tool cost, no PDT required
- Your tool bag weighs less

Application

- Available for both Cat5e and Cat6
- Designed to fit industry standard wallplates
- Commercial network installations, new or retrofit
- Home automation installations, new or retrofit

Technical Data

- F.C.C., ULC & RoHS compliant
- 50 micro-inch selective gold plating
- Molded from UL94-VO material
- Meets/Exceeds TIA/EIA-568-B.2-1

Order Info


P/N's and color selection for both Cat5e and Cat6 EZ-SnapJacks are on the reverse side.

We Make Connections EZ!


EZ-SnapJack Instructions

©2013 Platinum Tools Inc. All rights reserved. 3/13


- 1) Remove 2-3" of the outer jacket from your cable using the Cat5 & Cat6 Cable Jacket Stripper, P/N 15015. Note: There is a Cat5e and a Cat6 version of the EZ-SnapJack. Make sure you are using the proper version for your cable.

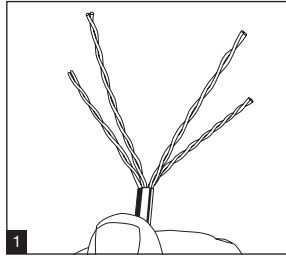


- 2) Separate pairs and lay out per the T568A or T568B specification required for your application. Use the convenient color chart on the EZ-SnapJack wire guide to assist you.

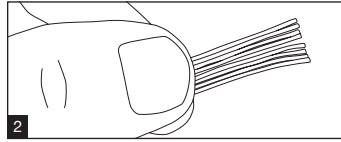



- 3) Insert the conductors through the holes in the wire guide making sure to keep them in the proper color code order.




- 4) Slide the wire guide all the way down to the outer cable jacket so that it fits up against the twisted pairs of the cable.




- 5) Cut off the extra wire extending from the guide so that it is flush with the wire guide edge using the Flush Cutter, P/N 10531.

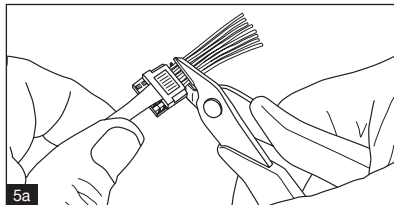



- 6) Open the EZ-SnapJack so that the hinged portion is on the bottom at 6 o'clock. Then rotate to 3 o'clock.

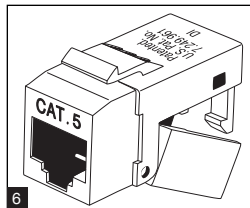


- 7) Insert the prepped wire guide into the hinged portion, pushing it forward until it stops. Hold it in this position.

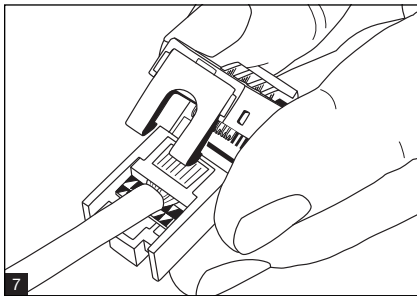

- 8) Close the hinged portion until it 'snaps' and latches into place.

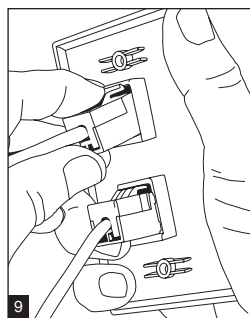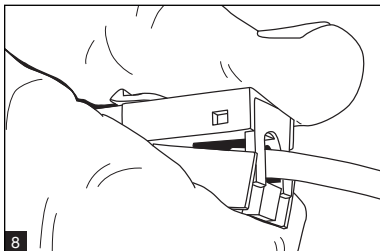


- 9) Insert the terminated EZ-SnapJack into the backside of the wall plate.

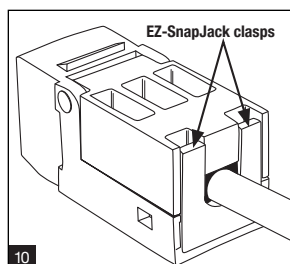

10) To Re-Open SnapJack:

Using a small slotted screwdriver, lightly pry open the two EZ-SnapJack clasps.

PLATINUM TOOLS®

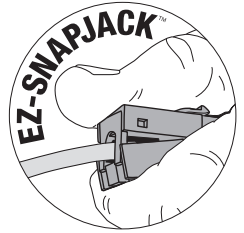

EZ-SnapJack™ – Cat5e

Bulk Bag
1 EA

ClamPack
4 EA

EZ-SnapJack Cat5e White	705WH-1	705WH-4C
EZ-SnapJack Cat5e Light Almond	705LA-1	705LA-4C
EZ-SnapJack Cat5e Blue	705BL-1	705BL-4C
EZ-SnapJack Cat5e Green	705GN-1	705GN-4C
EZ-SnapJack Cat5e Brown	705BR-1	705BR-4C
EZ-SnapJack Cat5e Almond	705AL-1	705AL-4C
EZ-SnapJack Cat5e Ivory	705IV-1	705IV-4C
EZ-SnapJack Cat5e Black	705BK-1	705BK-4C
EZ-SnapJack Cat5e Yellow	705YL-1	705YL-4C
EZ-SnapJack Cat5e Red	705RD-1	705RD-4C
EZ-SnapJack Cat5e Orange	705OR-1	705OR-4C

EZ-SnapJack™ – Cat6

EZ-SnapJack Cat 6 White	706WH-1	706WH-4C
EZ-SnapJack Cat 6 Light Almond	706LA-1	706LA-4C
EZ-SnapJack Cat 6 Blue	706BL-1	706BL-4C
EZ-SnapJack Cat 6 Green	706GN-1	706GN-4C
EZ-SnapJack Cat 6 Brown	706BR-1	706BR-4C
EZ-SnapJack Cat 6 Almond	706AL-1	706AL-4C
EZ-SnapJack Cat 6 Ivory	706IV-1	706IV-4C
EZ-SnapJack Cat 6 Black	706BK-1	706BK-4C
EZ-SnapJack Cat 6 Yellow	706YL-1	706YL-4C
EZ-SnapJack Cat 6 Red	706RD-1	706RD-4C
EZ-SnapJack Cat 6 Orange	706OR-1	706OR-4C

We Make Connections EZ!