


## **PROPER SIZING FOR INSULATING RUBBER GLOVES**

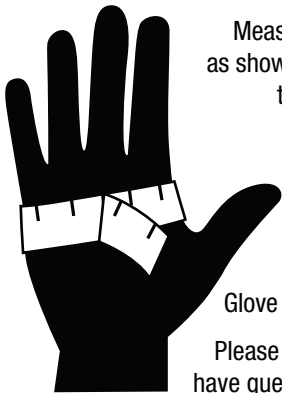

Measure the circumference of the palm, as shown, and add 1" to the measurement to determine the glove size needed.

---

*For example, a measurement of 9" plus the 1" would be 10" and would require a size 10 glove.*

---

Glove Sizes Available: 8, 9, 10, 11 and 12

Please contact Specialized Products if you have questions or would like to check stock.



[www.specialized.net](http://www.specialized.net)

(800) 866-5353